


wireless remote control LED Star curtains Use manual

1. The illustration part:

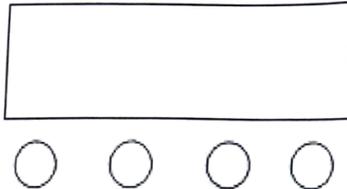

- A. function key
- B. additional key
- C. reduction key
- D. OK key

A B C D

Instructions: according to the function keys can cycle out several different functional effect, A digital tube in the first two digits represent the current function (see menu). After the two digits represent the function of. Address code. Or speed, parameters. Press B or C can modify the parameter values. Press the D key to confirm. 30 s no digital tube display closed operation, press A key digital tube can restart the display.

2. The LED display window function, (all function according to the selection and then press the D key to save)

No.	display	function description
1	D001	Eight channel address code, (001—512) B, C key to add and subtract address code values
2	CC50	7 colour jump to change, (01—99) B, C key to modify jump speed
3	CP50	Colorful gradient, (01—99) B and C modify pulse variable, velocity gradient
4	DE50	7 colour combination, (01—99) B, C key to modify combination change speed
5	BEBE	7 colour acoustic change
6	R255	Red colors, (000—255) B and C key change colors
7	G255	Green colors, (000—255) B and C key change colors
8	B255	Blue colors, (000—255) B and C key change colors
9	W255	White colors, (000—255) B and C key change colors
10	UYES	B key UYES: open the wireless remote control key C key U NO: close the wireless remote control

3. DMX512 channel :

No.	function	description
Channel 1	Tuned light	R, G, B, W tuned light, linear light changes, from dark to bright
Channel 2	Total stroboscopic	R, G, B, W total stroboscopic, from slow to fast
Channel 3	Function Selection	0—49: DMX Eight channel control; 50—99: saltus step; 100—149: The gradient 150—199: Pulse variable; 200—255: voice control
Channel 4	Function of speed	Function of speed, from slow to fast
Channel 5	R light-dimmer	R That move light, linear light changes, from dark to bright
Channel 6	G light-dimmer	G That move light, linear light changes, from dark to bright

Channel 7	B light-dimmer	B That move light, linear light changes, from dark to bright
Channel 8	W light-dimmer	W That move light, linear light changes, from dark to bright

Key number	display	Function Description
1	Wireless access key	Press 1 to enter the wireless remote control function and then press to exit
2	Blue Red brightness control key	Press 2 red light to adjust the light
3	White Green brightness control key	Press 3 green light to adjust dark
4	Blue brightness control key	Press the 4 blue light to adjust the darkness
5	White brightness control key	Press 5 white light to darken the adjustment
6	Strobe control key	Each time you press the strobe key 6 to change a speed 1: no strobe 2: Strobe speed 1 3: Strobe speed 2 4: Strobe speed 3 5: strobe speed 4
7	Jump mode control key	Colorful jump can be used in combination with strobe
8	Mode speed control key	Each time the mode speed key 8 changes a speed, controls the speed of the transition, the gradient, the pulse pattern 1: speed 1 2: speed 2 3: speed 3 4: Speed 4 5: Speed 5
9	Gradient mode control key	Colorful gradient can be used in combination with strobe
10	Pulse mode control key	Colorful pulse can be used in combination with the strobe
11	Voice mode control key	Colorful voice changes
12	Close light button	Press full dark

5. Features:

Operation is very simple, user-friendly design, dimming no flicker, jitter phenomenon. Can adapt to photography, photography, television and other lighting requirements of the strict occasions

Wireless Remote

- 1: on/off
- 2: Blue-dimmer (4-15) (0-15)
- 3: White - "
- 4: Blue - "
- 5: White - "
- 6: Strobe (0-4)
- 7: Blue/White alternate
- 8: Speed 1-5 (7)(9)(10)
- 9: Blue/White alternate with Fade
- 10: Blue/White 'burst' with less LEDs on at once
- 11: OFF (2-10)
- 11: Sound Active