 


Care for customers from the heart

# User Manual

## Easy Fold

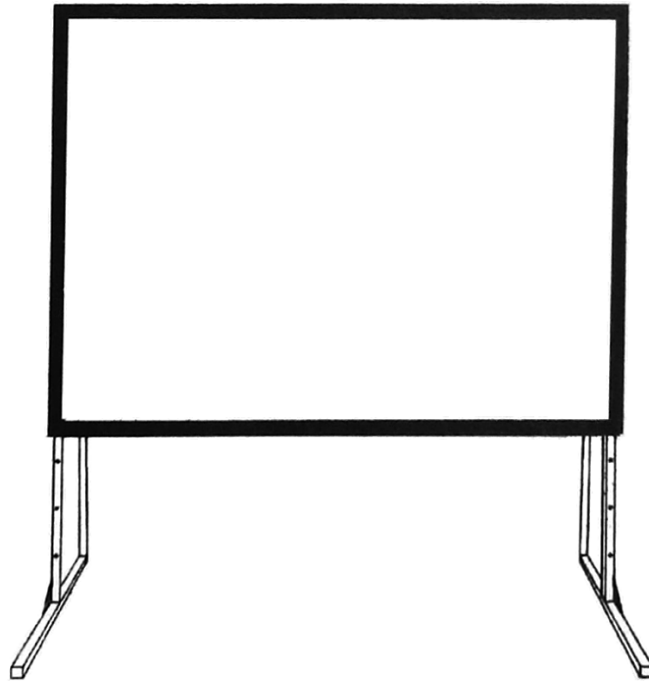

- Good clear picture quality
- Exquisite design
- Easy to use

Thank you for choosing our screen. Please read through these instructions before using the product.

Thank you for choosing our screen. Please read through the u.

using the screen. Correct usage and maintenance will insure that your annual be a long 1 "fa" for the product.

## User instructions

When setting up the projection screen, care must be taken to distinguish between the front and back of the screen fabric. The back of the fabric will have labels on the front. Dust, dirt and scratches on the projection surface will affect the picture quality. Please note the points below to prevent this:

1. Do not touch the projection surface with hands.
2. Do not write or draw on the projection surface.
3. Do not use fingers or sharp objects to point on the projection surface, this will deluge the screen fabric.
4. Use a soft damp cloth to clean the projection surface, do not use chemical cleaning solution, or alcohol. Use clean water.

After using the screen, disassemble the screen and store it in the box provided.

To avoid accidental damage and injury the screen should only be operated by adults.

## Product-Description

Design:

The aluminium frame is designed to be light weight and easily operated.

This makes it easy to carry, assemble and disassemble.

Screen Fabric:

The screen fabric is attached to the rectangular frame and held in place by several press studs, which ensure an evenly stretched and perfectly flat surface.

The front and rear projection fabric has a viewing angle of 100° and a gain of 1.0.

Both types of fabric are durable and can be folded many times without damage or distortion.

Assembly:

The screen can be assembled in 3 minutes and without the use of tools. When not in use the screen is stored in an impact resistant carrying case.

 
Ideally:

Business meetings, churches, schools, family centers and industrial training rooms.

Correct use of the projection screen will ensure better results.

For front projection assemble and view the screen as indicated in Fig.1

For rear projection assemble and view the screen as indicated in Fig.2.

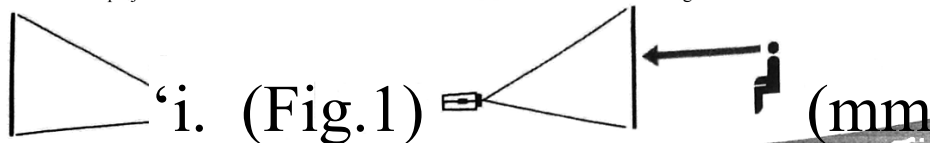

4...-1'''

Content and accessories list: When unpacking the screen, check that all the parts from the appropriate list are there.  
Use the parts as instructed by the user manual.

(Parts list) 250 inches

Specified screen size(inches)	250		
Part	Part number	Quantity	
Folding frame	1	1	Pcs
Screen fabric	2	1	Pcs
Folding legs	3	2	Pcs
Screen fabric bag	4	1	Pcs
Hand screws	5	14	Pcs
User manual	6	1	Pcs
Service card	7	1	Pcs
QC Pass	8	1	Pcs








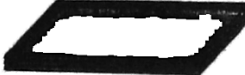
(Parts list) 100 inches-200 inches

Specified screen size(inches)	100, 120, 150, 180, 200		
Part	Part number	Quantity	
Folding frame	1	1	Pcs
Screen fabric	2	1	Pcs
Folding legs	3	2	Pcs
Screen fabric bag	4	1	Pcs
Hand screws	5	8	Pcs
User manual	6	1	Pcs
Service card	7	1	Pcs
QC Pass	8	1	Pcs

100", 120" lock screw need use 10pcs

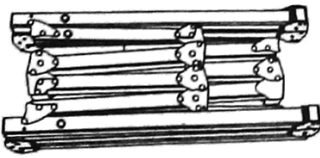
Note: The part lists above are subject to change without prior notice.

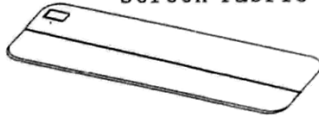Part diagrams



<b>Folding frame</b> 	<b>Front projection screen fabric</b> 	<b>QC PASS</b> 
<b>Screen fabric bag</b> 	<b>Hand screw (12pcs)</b> 	<b>User manual</b> 
<b>Left and right folding legs</b> 	<b>Rear projection screen fabric</b> 	

Note: The part diagrams above are subject to change without prior notice.


## Assembly instructions

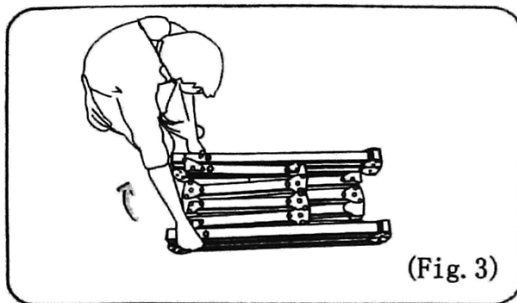 

  
1. Take the frame out of the box and place it on a flat surface. Unfold the longer sections first. (Fig. 3+4)

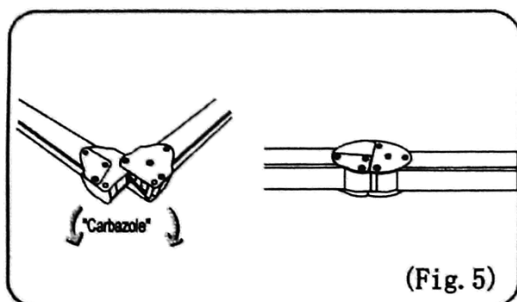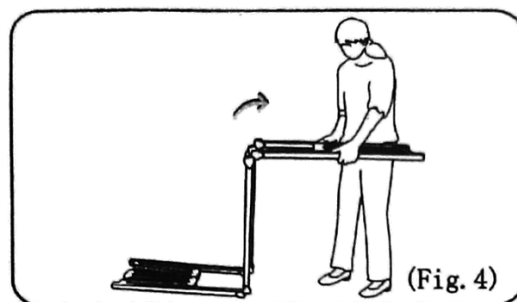


 
2. Unfold the frame until the latch on the hinge "clicks" into place. Repeat the procedure for the shorter sections. (Fig. 5+6)

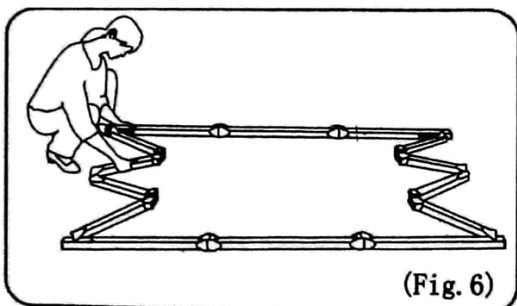


## Assembly instructions

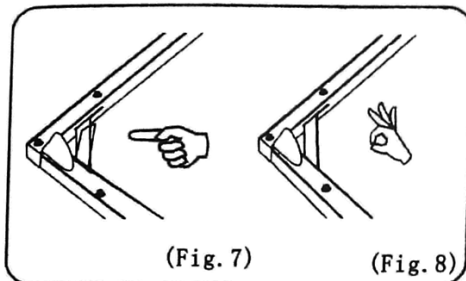 

  
3. Make sure all 4 corners of the frame are at 90° and the hinged support bar is straight and not bent. (Fig. 7-10)

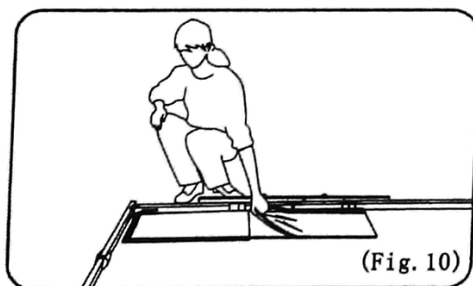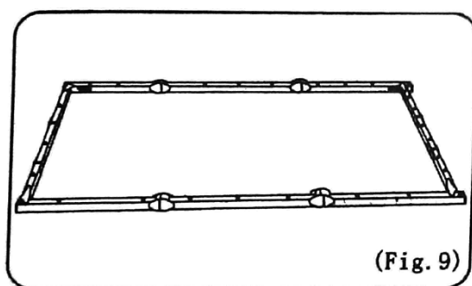


 
4. Take the screen fabric out of the bag and put it inside the frame next to the corner. Unfold as shown in the diagram. (Fig.10+11)

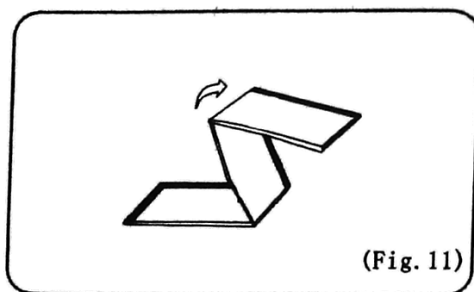

## Assembly instructions

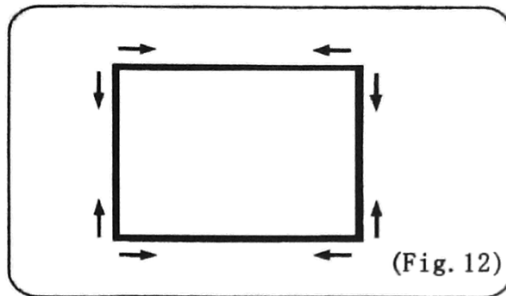 


  5. Once the screen fabric is fully unfolded, secure it to the frame by the press studs. Secure the press studs in the order shown in Fig. 12-15.

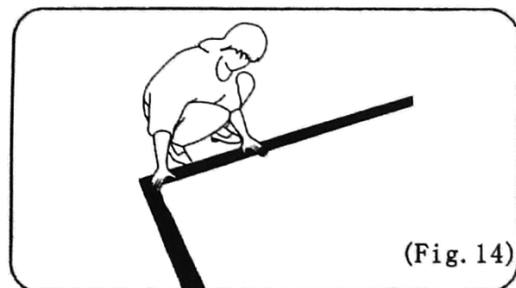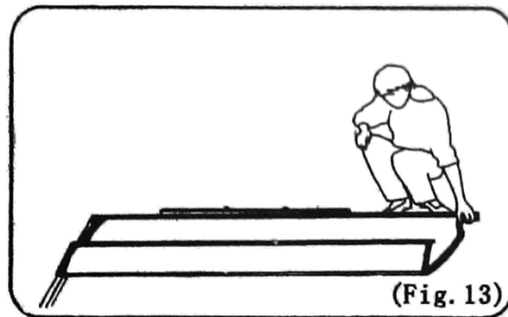


## Assembly Instructions

 (Fig. 16)

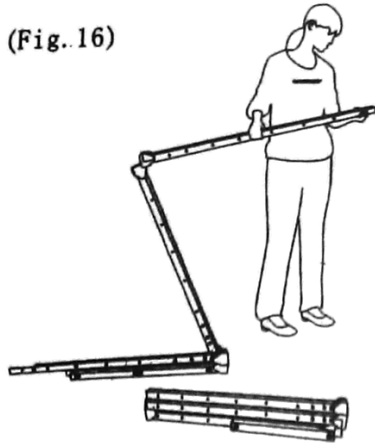

6. Take the folding legs out of the box and unfold as shown in Fig 16 and make sure the hinges click into place.

 
(Fig. 17)

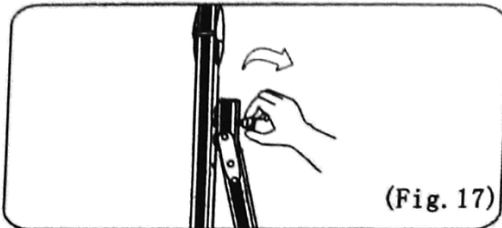



7. Once the legs are locked in place use the hand screws to secure the support leg to the vertical leg in an appropriate position.

(Fig. 17)


## Assembly instructions

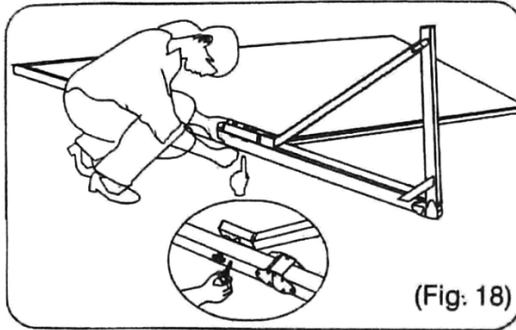 

  9. Lay the frame on the floor and position the legs over the sides of the frame. Use the hand screws to attach the frame to the legs. Once the legs are firmly attached lift the frame into the vertical position. (Fig. 18+19)

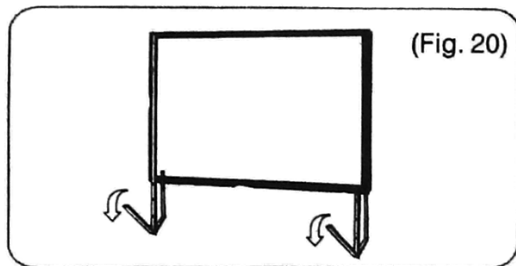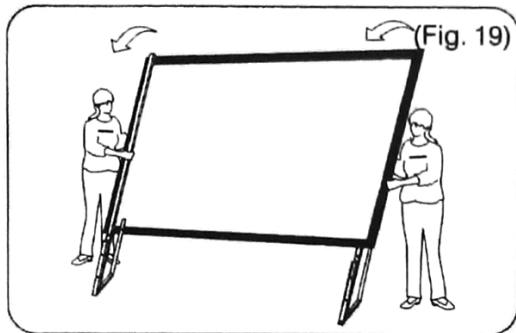


  9. When the frame is in the vertical position fold the front facing feet of the legs out. Assembly is complete and the projection screen will be stable on a flat surface. (Fig. 20)

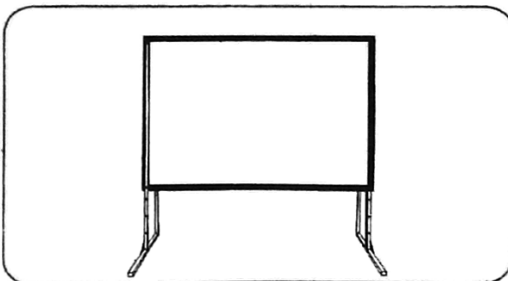





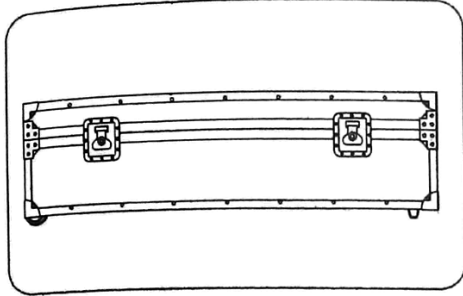


## Assembly instructions



10. After using the screen disassemble the screen and store it in the box provided. To disassemble the screen, implement the assemble procedure in reverse order

## Safety Notice

 <b>Warning</b> Misuse of the screen may cause damage to the screen, or injury to persons.	 <b>Notice</b> The projection screen must be set up on a stable surface where there is sufficient space. Failure to do so may cause the screen to fall over causing damage to the screen and injury to persons.
 <b>Do not climb on the screen</b> Do not hang things from the screen or climb on it. Doing so may cause the screen to fall off and damage the screen and cause injury.	
 <b>Do not disassemble</b> Do not disassemble the screen. Doing so may damage the screen and may cause injury. If the screen needs to be repaired, contact the dealer from which the screen was purchased.	 <b>Warning</b> After using the projection screen disassemble the screen and store it in the box provided. This will protect it from dust, dirt and accidental damage

Note: If the screen is faulty or is damaged in any way do not try to repair the projection screen yourself. Contact customer service to arrange for it to be repaired.  
The projection screen parts and specifications are subject to change with out prior notice.

## Screen Specifications

Ratio	Size (inches)	Projection area W(inches)	Projection area H(inches)	Projection area W(mm) $\pm 5\text{mm}$	Projection area H(mm) $\pm 5\text{mm}$	B (mm)	Aluminium frame size
72	4:3	57.6	43.2	1463	1097	75	32x32
84	4:3	67.2	50.4	1707	1280	75	32x32
100	4:3	80	60	2032	1524	75	32x32
120	4:3	96	72	2438	1829	75	32x32
150	4:3	120	90	3048	2286	75	32x32
180	4:3	144	108	3658	2743	75	32x32
200	4:3	160	120	4064	3048	75	32x32
250	4:3	200	150	5080	3810	100	36x64
300	4:3	240	180	6096	4572	100	36x65
350	4:3	280	210	7112	5334	100	36x66
72	16:9	62.7	35.3	1593	896	75	32x32
84	16:9	73.2	41.2	1858	1045	75	32x32
100	16:9	87.1	49	2212	1245	75	32x32
120	16:9	104.5	58.8	2655	1494	75	32x32
150	16:9	130.7	73.5	3319	1867	75	32x32
180	16:9	156.8	88.2	3982	2240	75	32x32
200	16:9	174.2	98	4425	2489	75	32x32
250	16:9	217.8	122.5	5531	3112	100	36x64
300	16:9	261.3	147	6637	3734	100	36x64

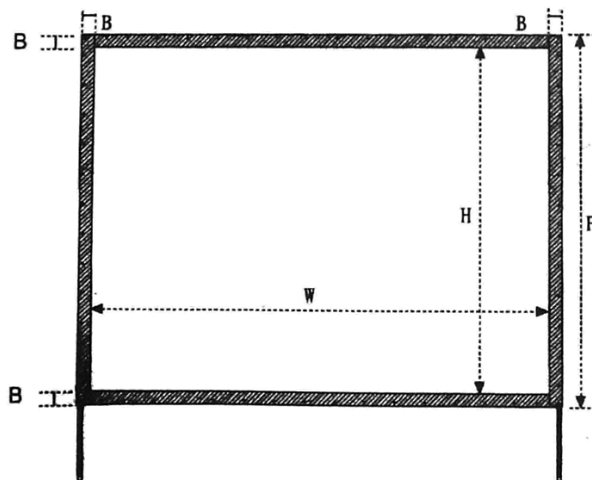 



Fig. 21




Fig. 22

# Notice
 
## Do Not

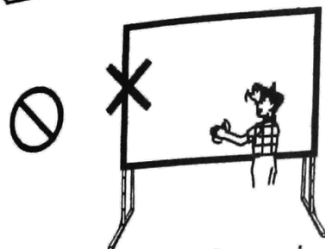

 Do not touch the projection surface with hands

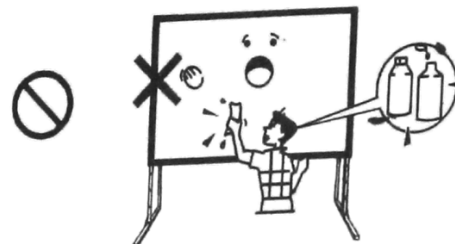

Do not use chemical cleaning agents to clean the projection surface.



Do not draw or write on the projection surface




Do not disassemble the screen.

## Correct



 Use a soft cloth or brush to clean the projection surface.

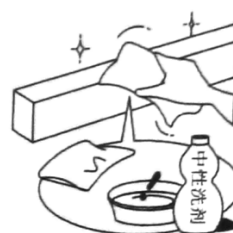

Use water and a soft cloth to clean the screen.



After using the screen disassemble the screen and store it in the box provided.

