

Prefix	Channels	Function
A	0-512	dmx channel
r	0-255	Brightness (Does Not Prefix C)
G	0-255	Brightness (Does Not Prefix C)
b	0-255	Brightness (Does Not Prefix C)
U	0-255	Brightness (Does Not Prefix C)
C	0-10	Different sections of light on
	11-12	Rotating/Flashing
F	0-12	Fade Scene
d	0-12	Strobe Speeds
S	0-6	Sound Active Modes

Use Mode to cycle Prefix

Use Function to save entry