

# American DJ® User Instructions

---

## Snap Shot II™

**Caution!** Always disconnect from main power before replacing lamps or servicing unit. Remember to always replace with same lamp and fuse.



Thank you for purchasing this *American DJ®* product. For your convenience this product has been lamped and is ready to be used, there is no assembly required. Please read the following instructions before installing or using your new unit.

### Product Description:

**A new revolution in Strobe Lights!** The Snap Shot II™ is a 70W, ultra light weight Strobe Light. Features include: plastic high tech case design with hanging bracket, and variable speed control (1 - 15 flashes per second). The Snap Shot II™ can flash different colored light by replacing the interchangeable lamp cover, Snap/D. Available colors: red, blue, green, & yellow. **When connecting to a S-Matrix™ system you must connect from output of S-Matrix to input of Snapshot™. If proper connections are not used both units will be damaged.**

### Product Instructions:

Plug the Snap Shot II™ into power. Flash rate may be controlled by the variable speed knob located on back of unit. The Snap Shot II™ is linkable via 1/4" mono jacks, and may be controlled by the American DJ® S-2A™, S-4™, S-10A™, and the S-Matrix™. When linking, follow the "IN" & "OUT" input on back of unit. The Snap Shot II may be hung in a safe location by its hanging bracket.

**To replace lamp;** unscrew front dome of the fixture. Do not touch lamp with bare fingers, oil from fingers will ruin lamp. Use a clean, dry cloth for replacement. Replace bulbs; reassemble.

For service, contact your *American DJ®* dealer.

### **SPECIFICATIONS:**

Lamp: ZB-70 70W, Power: 120V/60Hz,  
Weight: 3 lbs. Size: 7.75" x 7.75" x 8"  
Fuse: 1A



*American DJ®* LOS ANGELES, CA. 90058 USA