

- Tripod screen belongs to the building-up screen, Just the triangular tripod and screen composited, usually divided into two kinds of specification that is matte white and glass beaded.

Tripod screen:



Using method:

- This kind of screen are the building-up product, so need manipulate it follow instructions as below:

1. Spread out the prop foot of triangle tripod in order to make the screen firm and vertical.




2. Thumb of left hand to push the button A in bottom of rod, right hand pull upwards in order to separate the regular rivet in bottom of tripod and the curtain of screen.

Regular rivet of tripod



3. Revolve around the crook which in bottom of tripod to the concave place.

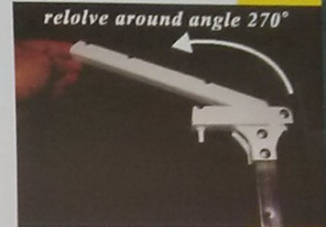


4. Revolve around the roller in vertical position of angle 90, so that make it to the level position. Please notice that the arc drawbench should on top of hull when revolving it.




revolve around angle 90°

5. Drag the arc drawbench upwards, hang into the concave place which in top of tripod (There's some concave place in the crook to adjust the vertical position angle of curtain)

Crook

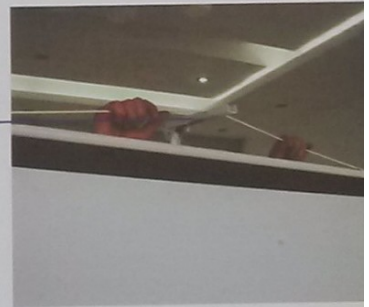

6. Thumb of left hand push the button A in top of tripod, right hand hold the rod till to the top.

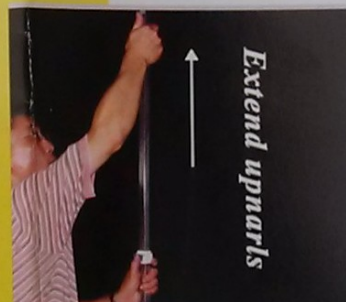

7. Right hand hold the haft which in middle of tripod, thumb push the button B, drag downwards the haft, adjust the height follow the actual need of screen curtain.



Button A

Button B

Attention proceeding:

1. This kind of screen are the product which should be used indoor, not be suitable for using outdoor.
2. Spread out the triangular tripod totally in order to make the curtain of screen more steadily.
3. Please withdraw in time after use it, notice that one hand push the button A, another hand hold the prop rod, avoid to hurt hands when the prop rod descend suddenly.

